


UNIVERSAL TRAY TROLLEYS

ASSEMBLY & OPERATING INSTRUCTIONS

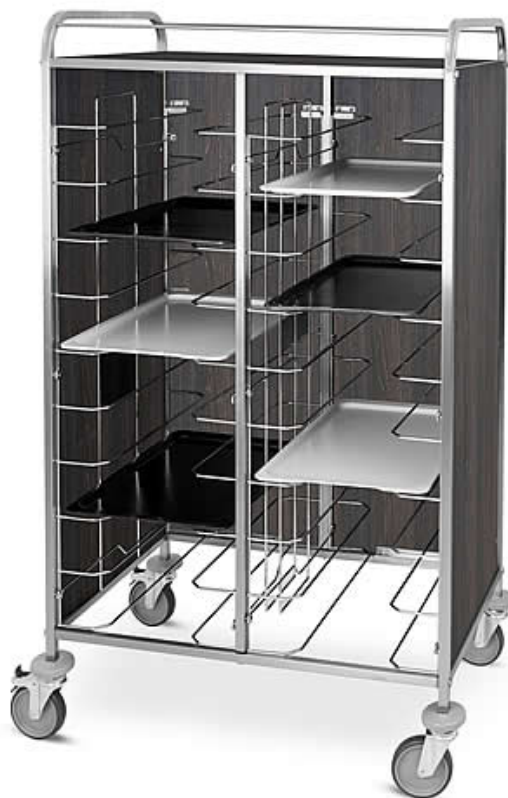

Versigen

Foodservice Equipment

1/182 Hartley Road, Smeaton Grange NSW 2567
Tel. 1300 653 330

www.versigen.com.au - sales@versigen.com.au

IMPORTANT NOTICE:

Take care to ensure that solid panels are protected and handled with care until assembly is complete. If the panels need to be laid on the floor prior to final assembly, cover the floor first with a clean material or other suitable covering.


Do not use a hammer to force the panels into position. If the panels are positioned correctly against the trolley frame, they will lock into the position without undue force.

Assembly is considerably easier if two people are involved.



UNIVERSAL TRAY TROLLEYS

Art. 1470U
Art. 1475U
Art. 1480U
Art. 1472U
Art. 1477U
Art. 1482U

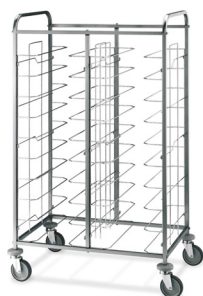

Art.1475U

Art. 1471SU
Art. 1476SU
Art. 1481SU
Art. 1474SU
Art. 1478SU
Art. 1483SU



Art.1471SU

Art. 1470U-PN
Art. 1475U-PN
Art. 1480U-PN
Art. 1472U-PN
Art. 1477U-PN
Art. 1482U-PN



Art.1475U-PI

Art. 1470U-PI
Art. 1475U-PI
Art. 1480U-PI
Art. 1472U-PI
Art. 1477U-PI
Art. 1482U-PI



Art.1470U-PN

Art. 1471U
Art. 1476U
Art. 1481U
Art. 1474U
Art. 1478U
Art. 1483U



Art.1476U

Contents

Declaration of Conformity.....	pag.2
Introduction and Warranty	pag.2
Warning	pag.2
Environmental Notes	pag.3
Purpose of the Product.....	pag.3
Installation	pag.3
Instructions for users	pag.3
Maintenance and cleaning	pag.3
Technical features	pag.4
Spare parts.....	pag.4
Mounting Scheme	pag.6

Versigen Foodservice Equipment
1/182 Hartley Road, Smeaton Grange NSW 2567
Tel. 1300 653 330

EC Compliance of the Product

These trolleys are manufactured by Metalcarrelli S.r.l., Via A. Gagliani 10/A, 47814 - Bellaria I.M. (RN) - Italia, P.I.V.A. 03249750401. Versigen Australia Pty Ltd is the importer and distributor of Metalcarrelli equipment sold in Australia and New Zealand.

Denomination: UNIVERSAL TRAY TROLLEYS

Model: _____

The trolleys are manufactured in compliance with the safety requisites and law Directives which relate to the product:

1935/2004/EC	Directive on general product safety.
2001/95/EC	Directive relating to materials and articles intended to come into contact with foodstuffs.
10/2011(EU)	Regulation on plastic materials and articles intended to come into contact with food.

Introduction and Warranty

We thank you for purchasing one of our products manufactured in compliance with the strictest standards and according to technical principles aiming at ensuring an easy and safe use in professional work environments.

The manufacturer and importer guarantee its products for 12 months, in compliance with the legislation in force. Consumables parts are not covered under the warranty.

All interventions under warranty will be carried out at Manufacturer's premises only.

Any transport and delivery costs will be at the Customer's charge.

In order to activate the warranty, the original purchasing invoice or any other mandatory document shall be produced.

Safety warning

Carefully read the warnings contained in this USE AND MAINTENANCE MANUAL, as they provide important information for safe installation, use and maintenance.

Keep this manual for future reference by the operators. The manual must be kept throughout the lifetime of the equipment and must be made available to users for any reference. It is necessary to read it for any information on the installation, operation and maintenance of the equipment.

After removing the packaging, make sure of the completeness of the equipment.

The packaging materials (plastic bags, polystyrene, cardboard, etc.) must be kept away from children, because they may be dangerous. Collect and select the materials according to the type of material (e.g. cardboard, wood, plastic materials, etc.) and dispose of them in compliance with the norms in force.

Do not use acid substances or aggressive chemical agent for the machine cleaning.

Environmental Notes

- PACKAGING:** The packaging materials (plastic bags, polystyrene, cardboard, etc.) must be kept away from children, because they may be dangerous. Collect and sort the materials per type (e.g. cardboard, wood, plastic materials, etc.) and dispose of them in compliance with the regulation in force.
- OUT OF SERVICE:** At the end of the equipment lifetime, disassemble and sort the components (metal frame, etc.) and dispose of them according to any local and national regulations.

Purpose of the Product

Universal Tray Trolleys are designed and built in compliance with the relevant technical norms and directives with a double function:

- to optimize the distribution of trays ready for the use by consumers maintaining the quality unchanged and respecting the hygienic and safety conditions;
- to collect trays after the use by consumers.

The Manufacturers recommends:

- not using the Universal Tray Trolleys for purposes other than those recommended
- not using the Universal Tray Trolleys on a steep ground if they are not equipped with wheels with brake.

Installation

The Universal Tray Trolleys, detailed in this manual, are delivered in a single packaging, disassembled for final assembly by the purchaser.

After removing the packaging, make sure the equipment is intact.

Assemble the trolley according to the instructions in "MOUNTING SCHEME".

Instructions for user

Do not move the trolley on uneven floors to avoid damage.

Do not stop and leave the trolley unattended on a slope.

If the equipment is fitted with braked castors, engage them when you reach the desired position.

Maintenance and cleaning

- CLEANING:** Use a soft cloth and a neutral detergent. Never use chemicals including chlorine, bleach, etc., that may corrode or damage stainless steel.
Do not clean the surfaces using a steel scouring pad, a brush or a steel scraper

- MAINTENANCE** Before using the trolley, ensure that castors are not blocked by dust or dirt particles. If necessary, clean the castors thoroughly


Technical features

- Stainless steel 2x2cm square tube construction with bolted cross-members
- Chrome-plated steel wire supports
- Suitable for trays of max 53x39cm, even in different sizes and shapes
- Two or three side panels in AISI 304 stainless steel or melamine-faced
- Grey rubber ring buffers
- Swivel castors, \varnothing 12.5cm

Technical data						
Open series	1470U	1475U	1480U	1472U	1477U	1482U
two panel in melamine	1470U-PN	1475U-PN	1480U-PN	1472U-PN	1477U-PN	1482U-PN
three panel in melamine	1471SU	1476SU	1481SU	1474SU	1478SU	1483SU
two panels in stainless steel	1470U-PI	1475U-PI	1480U-PI	1472U-PI	1477U-PI	1482U-PI
three panels in stainless steel	1471U	1476U	1481U	1474U	1478U	1483U
Guides numbers	10	20	30	12	24	36
Tray size cm	11					
Range of guides cm	53x39 max.					
Width cm	52	95	138	52	95	138
Depth cm	60	60	60	60	60	60
Height cm	159	159	159	183	183	183
Optional:	S1200 - Set with 2 braked castors					
	SE200 - Set with 4 resilient castors (2 with brake)					
Accessori:	A050U - Removable stainless steel universal container					


Spare Parts

Pos.	Code	Description	1470-1475-1480 1471-1476-1481	1472-1477-1482 1474-1478-1483
1	005151250001	castor \varnothing 125 mm	X	X
1	005151250002	castor \varnothing 125 mm with brake	X	X
1	005201250023	resilient castor \varnothing 125 mm	X	X
1	005201250022	resilient castor \varnothing 125 mm with brake	X	X
2	233004680003	Rubber bumpers	X	X
3	233005280002	Chrome-plated steel wire supports for 10 places	X	
3	233005280001	Chrome-plated steel wire supports for 12 places		X

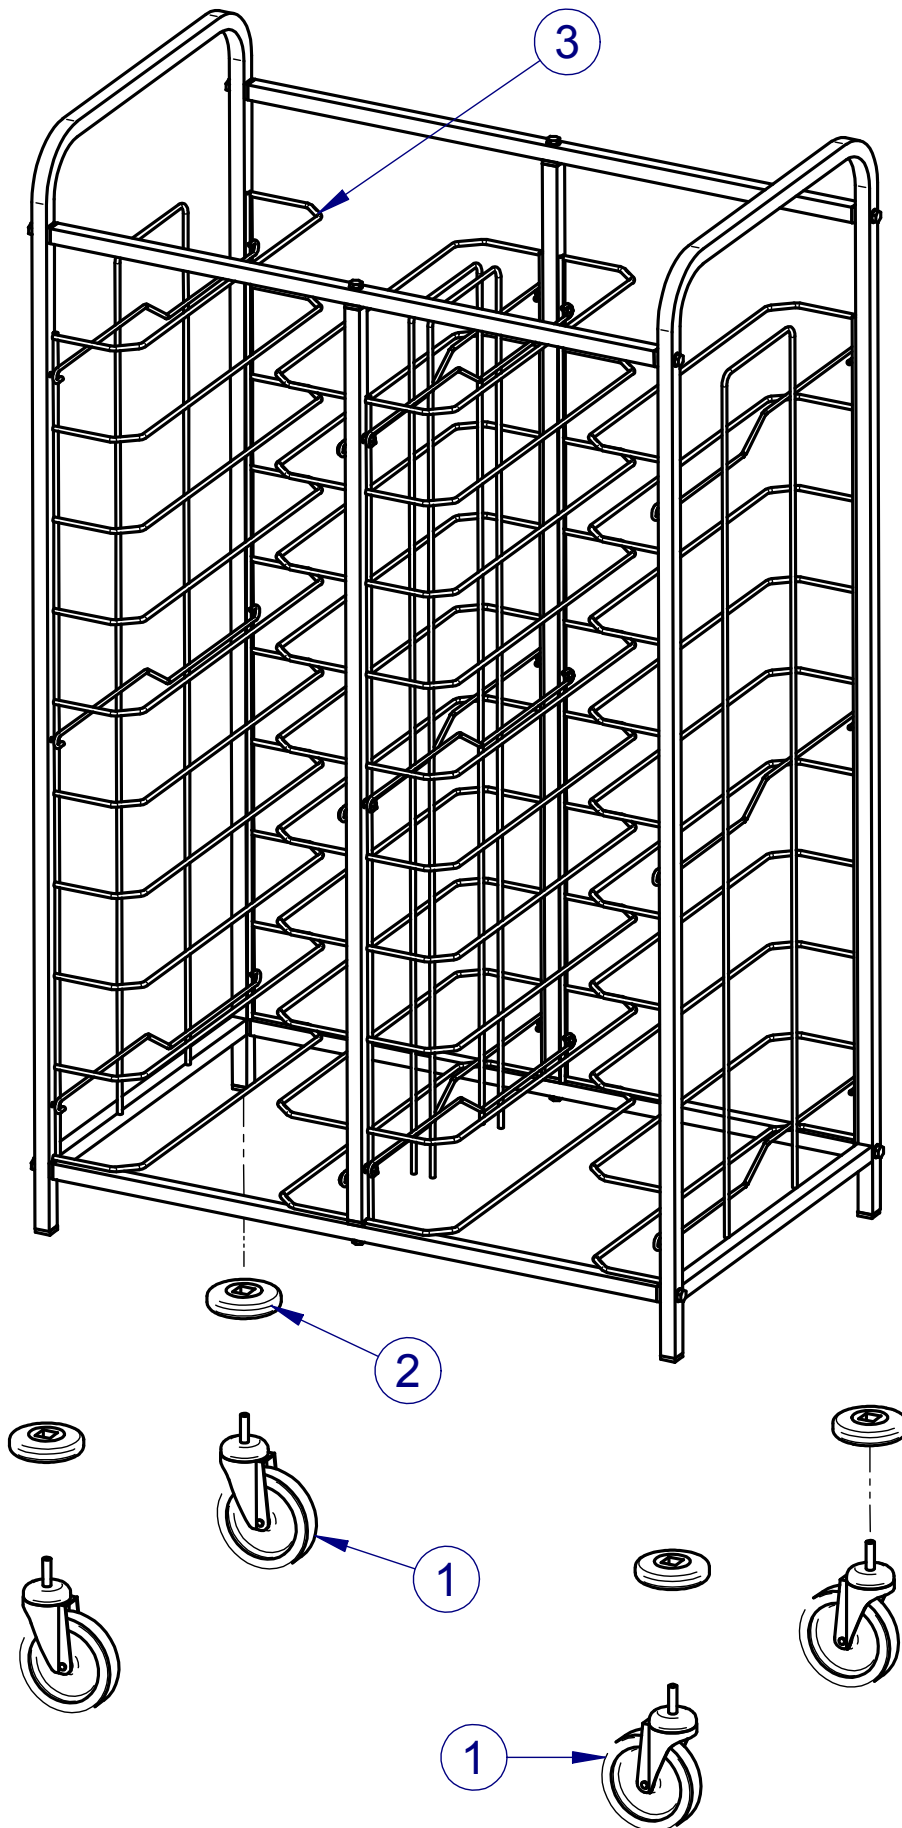


Mounting Scheme


1

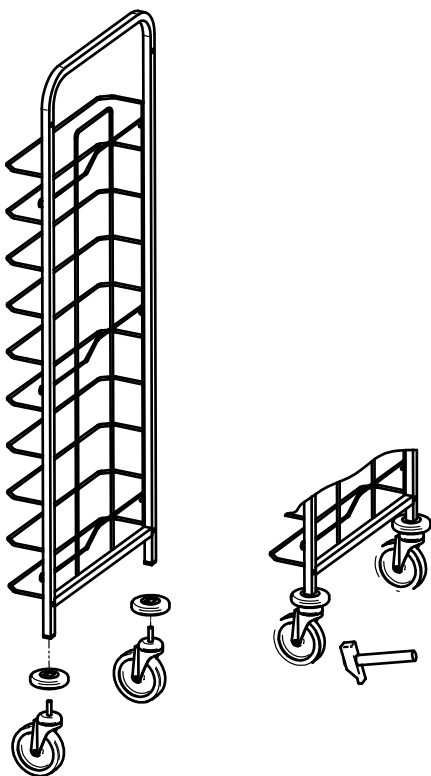

2

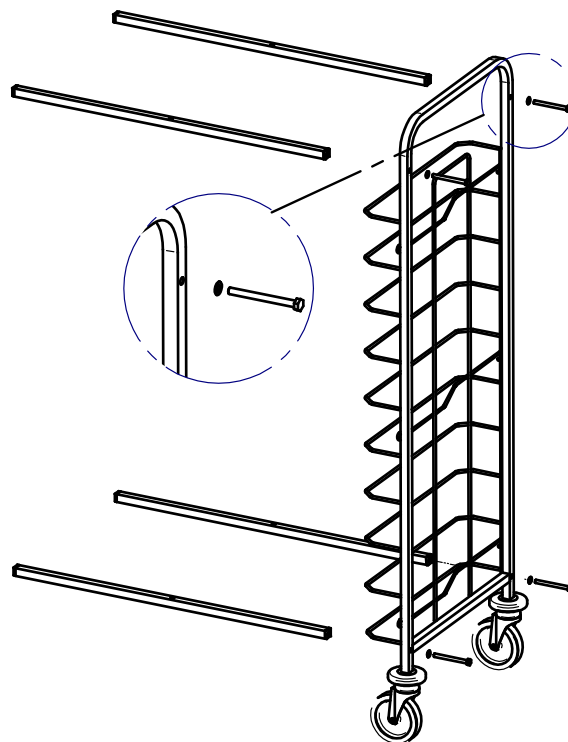

3

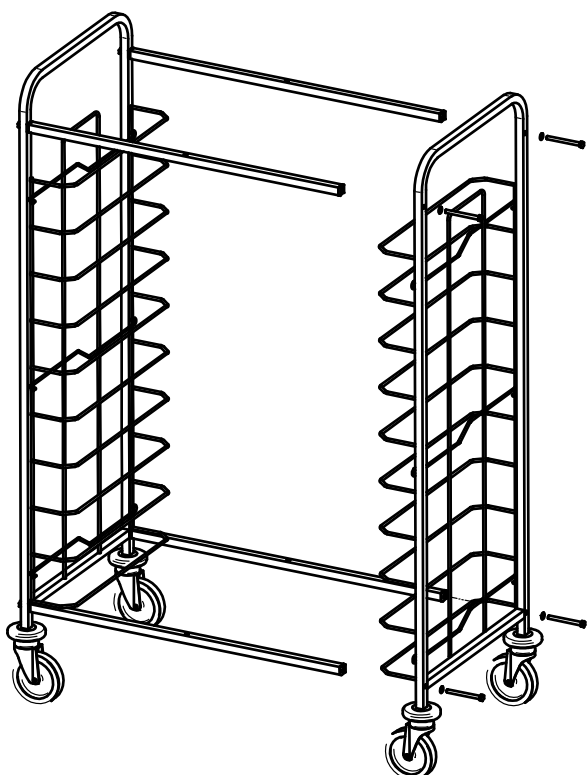

4

